

# Quick Start Cobi 18


USER GUIDE AND OPERATIONAL MANUAL

ICE ROBOTICS




# Unpack the Machine


- 1 Remove the 4 clips that hold the upper box onto the base.

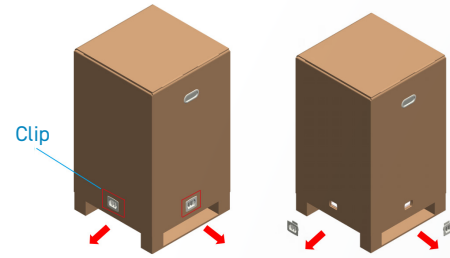


- 2 With 2 people, hold the handles on the outer box, pull it up and remove it completely.

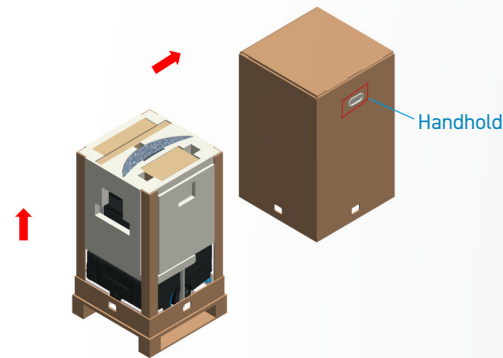

- 3 Remove the accessories box stored on the top of the packaging, it includes main brush, squeegee, mop, side brushes and hopper.

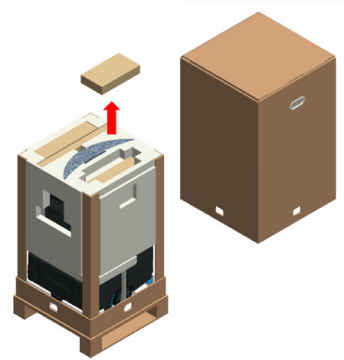


- 4 Continue to remove the packaging materials, including the upper foam and corner supports, fully exposing the machine.

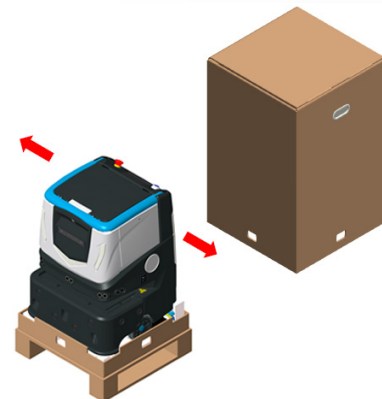

- 5 With 2 people, lift the unit up and take it out from the bottom box, then set it on the floor gently.



- 6 Remove the protective film from the Binocular Camera Module and 3DTOF.

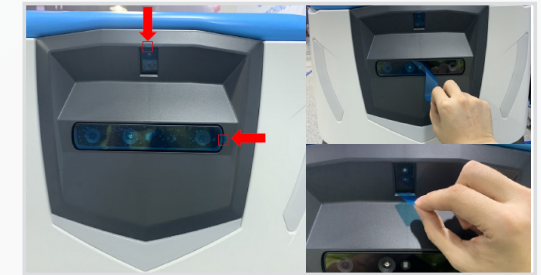


# Machine Setup and Installation

ICE ROBOTICS

## 1. Main Brush Install and Removal

- Check and ensure the machine is turned off.
- Remove the tank assembly, mop and squeegee.
- Gently lay the machine on its back on the floor with its front facing upwards.
- Hold the installing hub of the main brush, ensure the socket on the end aligns to the driving gear correctly, turn left to lock the hub and install the main brush.
- Gently raise the machine and put it in the upright position.

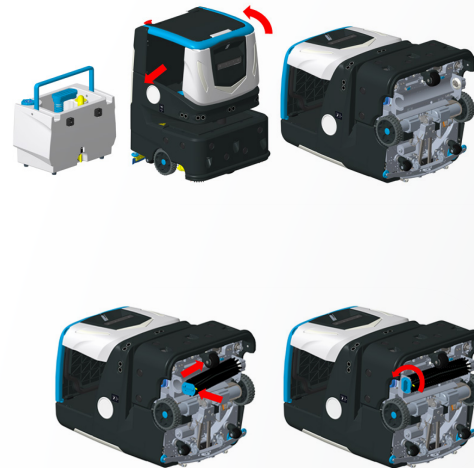

## 2. Side Brushes Install and Removal

- Check and ensure the machine is turned off.
- Remove the tank assembly, mop and squeegee.
- Gently lay the machine on its back on the floor with its front facing upwards.
- Open the left side door, hold the side brush and ensure the install socket is properly aligned to the drive gear, simply push it up to lock and install. Same procedure to install the right-side brush.
- Gently raise the machine and put it in the upright position.



## 3. Hopper Installation

- hold the hopper on the end and ensure the magnetic surface faces up, simply push it in to lock and install.



## 4. Squeegee Install and Removal

- Hold the squeegee by pinching the 2 holders, ensuring the magnetic surface faces upwards, simply lift it up to lock and install. Pull it down to unlock and remove.



## 5. Mop Install and Removal

- Ensure the squeegee is installed on the machine before installing the mop.
- Attach the microfiber cloth mop on the mop holder via hook & loop before installing the mop.
- Hold the mop and align the socket on the mop holder and the hook on the squeegee holder, push it down to lock and install the mop.



## 6. Filling the Solution Tank

- Check and ensure the machine is turned off.
- Raise the transport handle, lift the tank handle, then remove the tank assembly .
- Remove the solution tank cap. Fill solution tank with clean water and the appropriate cleaning detergent. Install tank back on the machine, ensuring the rubber stands align to the tank holder base.
- Check around the machine and ensure there are not any water leaks.



## 7. Charge the Battery

- Make sure the battery power button is turned on.
- Plug battery power cord into approved power outlet to charge the battery. Keep the battery door open for ventilation.
- Store the machine in an approved area. Folding the handle down will set the parking brake for secure storage.





# Starting Up the Machine

ICE COBOTICS

## BEFORE EACH SHIFT



- Unplug and store power cord.



- Turn battery power on.



- Fill solution tank with water and appropriate chemical.




- Check cliff and lidar sensors are clean.
- Wipe with dry or lightly damp microfiber cloth.


- 1 Press the main power switch and the touch screen will power up.



- 2 Check the screen for warning messages. If a message appears, touch the message and follow instructions on how to clear the warning. If warning fails to clear, please contact [ICE Robotics customer service](#).

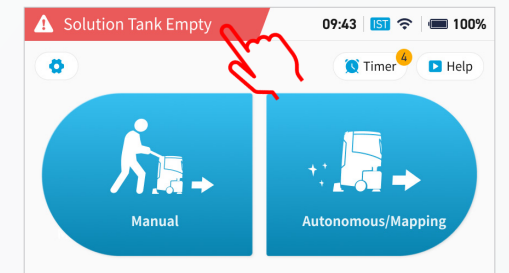


- 3 Enter the start up code: 520000

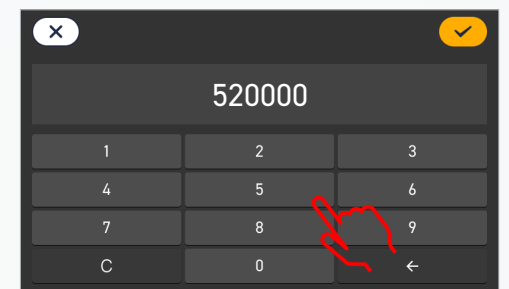

## Placing Location Code






Place the location code on a flat surface, non-reflective wall, columns, etc., approximately 24 inches from the wall and 32 inches from the machine.

Maintain enough space in front of the location to allow the Cobi to scan, operate and turn. Best case placement is on a wall with minimum 18 inches clear either side, avoid doors/doorways, on a flat wall, not on a moveable item.



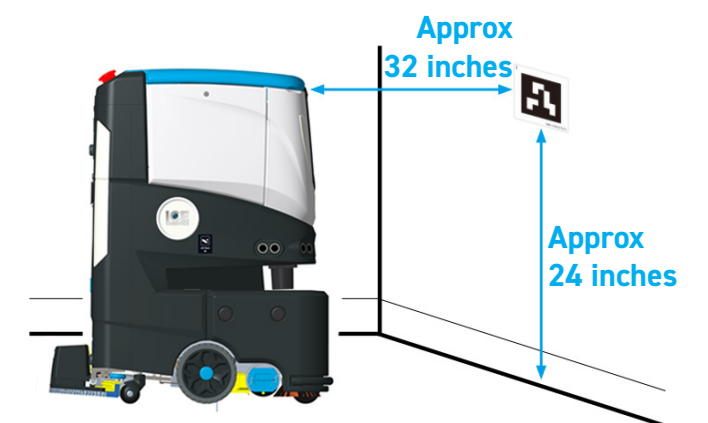


# Teach a Cleaning Route

- 1 Select the Autonomous mode by touching the icon "Autonomous/Mapping" on the screen.
- 2 Push the Cobi to the front of the Location Code and scan it.
- 3 Touch the [+] icon to add a cleaning route.
- 4 Cobi 18 has two different cleaning route modes. Custom mode and Auto-fill mode. Select the mode you want by touching the corresponding icon. Custom mode is available for multi-obstacles, and Auto-fill is available for open area.
- 5 Release the handle and push the GO/STOP button as shown on the animation. The vacuum and brush motors will automatically turn on and the Cobi is now ready to be taught a route.

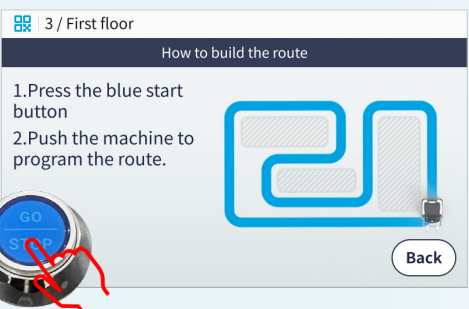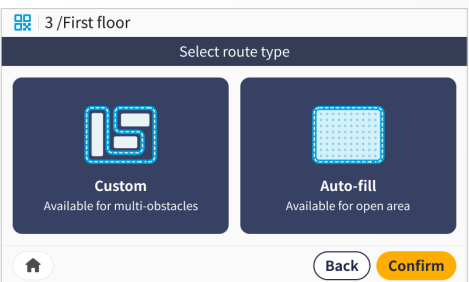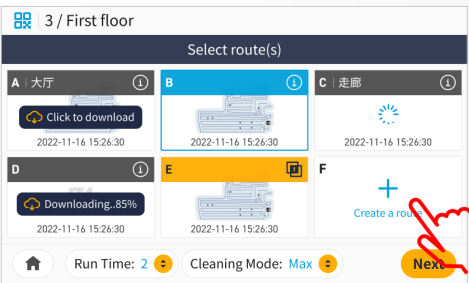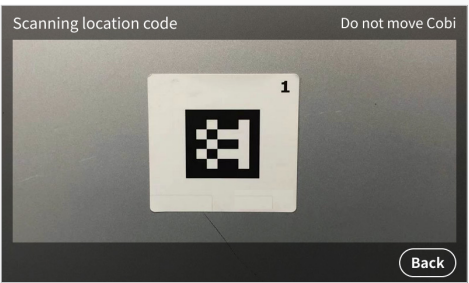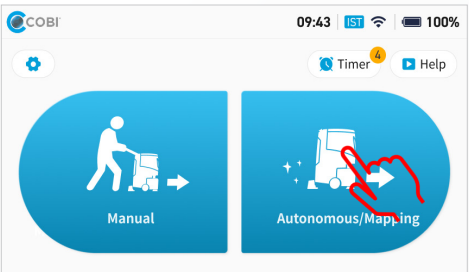

- 6 Push the Cobi along the route you wish to clean.
- 7 The Cobi will learn the route you teach it. You may switch between ECO mode and MAX mode as needed.
- 8 Once the route teaching is finished, push the Cobi back to the location code and direct the front camera to the location code. Touch the save icon and the Cobi will scan the location code and save the new cleaning route.
- 9 When the route has saved successfully, push the home icon and return to the autonomous mode interface. The cleaning route is now completed.

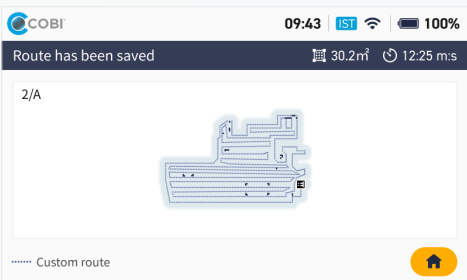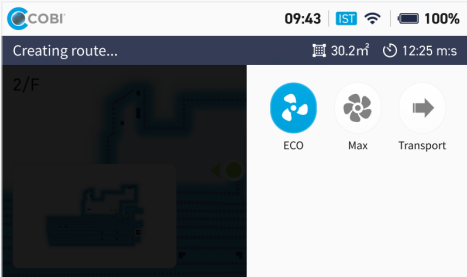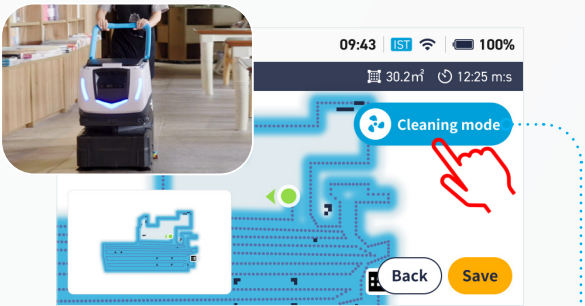

## ROUTE MODES

### Custom Route

The machine will follow the exact cleaning route it is taught.

### Auto-Fill Route


Teach the outline of the area you want to clean, and the machine will automatically fill in the route when in Autonomous Mode.




# Run Autonomous Mode

ICE COBOTICS


- 1 Select the Autonomous mode by touching the icon [Autonomous/Mapping] on the screen.

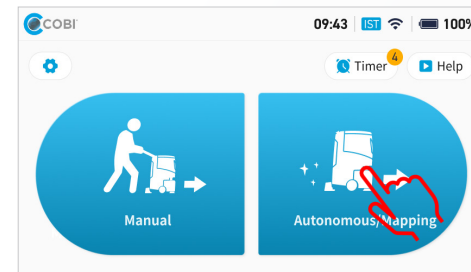


- 2 Push the Cobi to the front of the Location code and scan it.

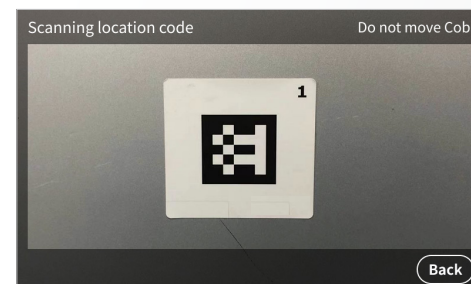


- 3 Select the cleaning route you want to clean.

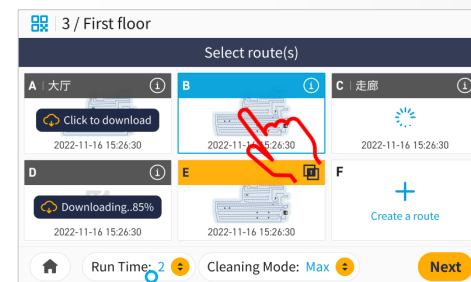

- 4 Click mode selection or times selection button if needed. There are three possible cleaning modes when in Autonomous mode. Select the mode you want and push/tap the corresponding icon. Select the number of times you want to run the route and then push/tap the confirm button.

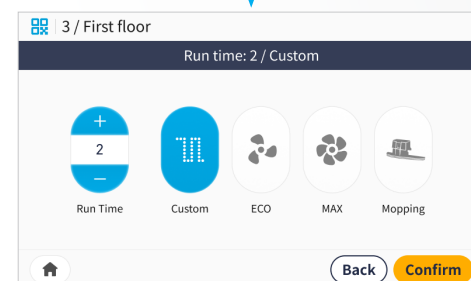


- 5 Release the handle and push the GO/STOP button as shown on the animation. The vacuum and brush motors will automatically turn on and the Cobi will begin to work in Autonomous mode.

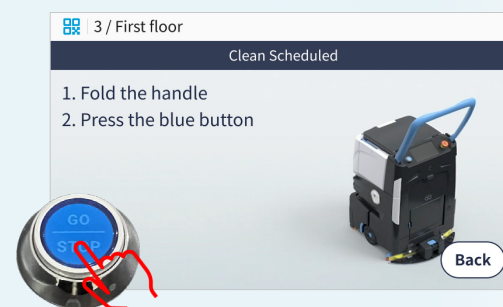


6


When the autonomous has completed successfully, push the home icon and return to the autonomous mode interface.

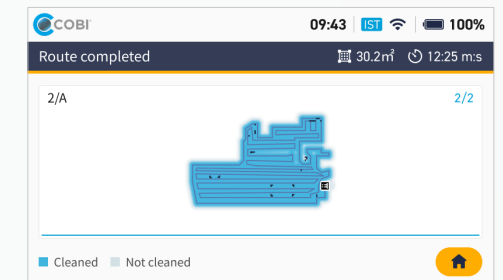


## AFTER EACH SHIFT

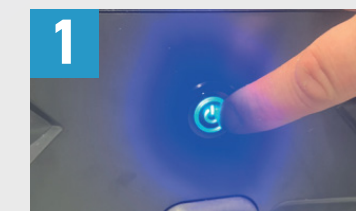


Turn off main power.

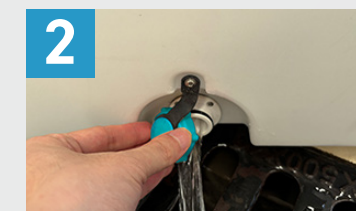

Empty and rinse solution and recovery tanks.

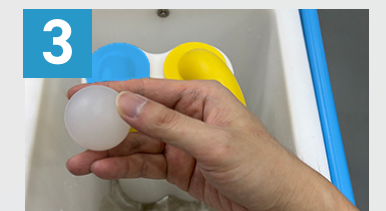


Remove recovery tank float-ball and rinse clean.

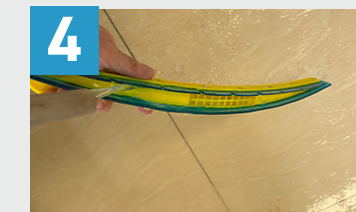

Remove squeegee assembly, clean by flushing water and wiping with clean cloth.




Remove and clean hopper.

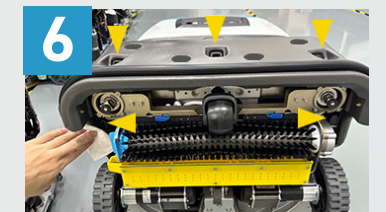

Wipe off the four cliff sensors with microfiber cloth.



Plug machine into approved outlet.

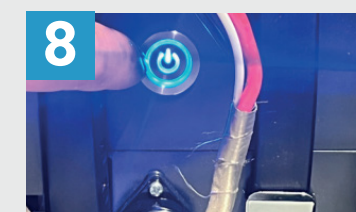

Keep battery on (blue) when charging.



Leave tank cover open so it can dry naturally.

## CLEANING MODES

### ECO Mode

The machine will work in energy-saving mode. It is applicable for lighter duty scrubbing or when cleaning in a noise sensitive environment.

### Max Mode

The machine will work at full power, it is applicable for scrubbing heavily soiled floors.


### Mop Only Mode

Only the drive motors will be operational and the mop will pick up pre-existing moisture on the floor.


# Other Cleaning Options

## Manual mode


- 1 Tap the Manual Mode icon on the main user interface as shown.

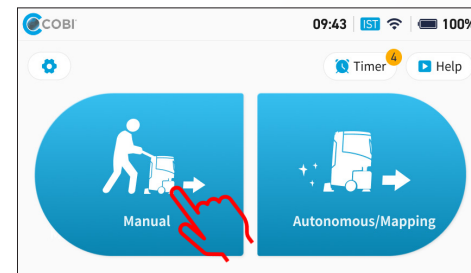


- 2 Tap the start icon as shown.

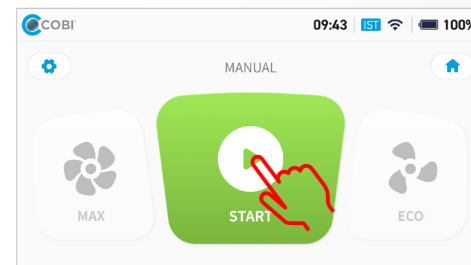


- 3 Click the icon of cleaning mode and switch the cleaning mode between Max mode and ECO mode as you desire.

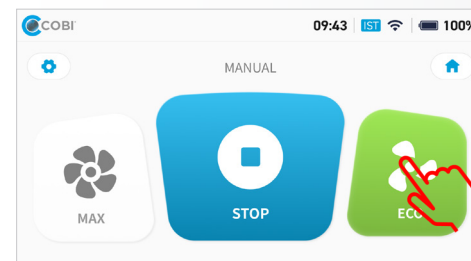

- 4 Push the machine to the area you want to clean. To prevent any damage to the floor, keep machine moving forward while in operation.

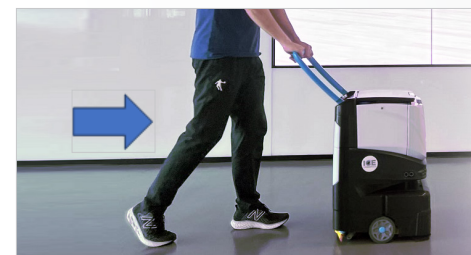


- 5 Tap the stop button to end manual cleaning. The brush motor will stop immediately, the vacuum motor will shut off after 15 seconds. You can push home icon and return to the main interface.

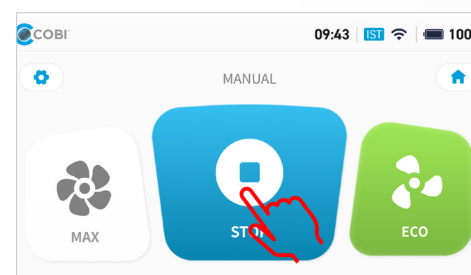


# Confirming Clean with i-SYNERGY APP


1 Log in to the customer APP.

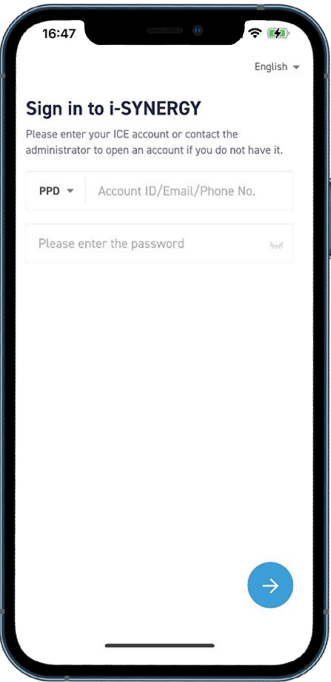


2 View your overall clean score for all sites. To view individual sites, click into the location card.

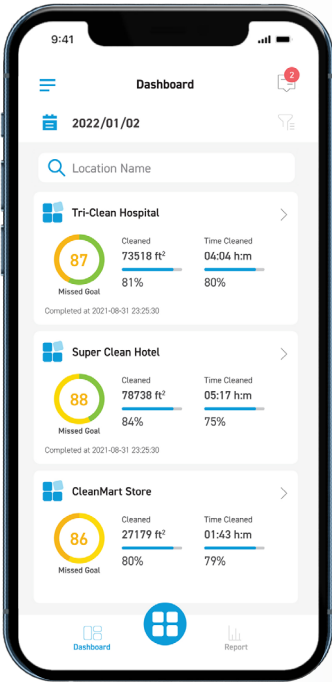





3 View individual sites clean scores. To drill down by machine, click into the site card.

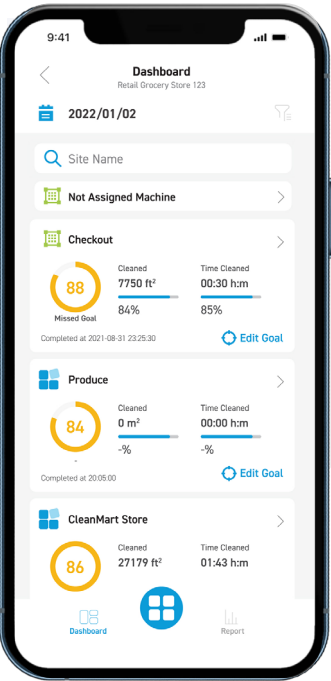

4 View machine data by site. To view individual machine data, click into the machine card.

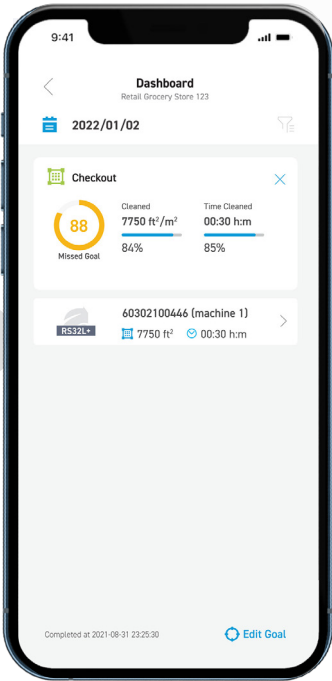

4 Here you can find detailed information for each machine. Click "Cleaning time (Daily)", "Cleaning Report (Monthly)" or "Cleaning Record" to confirm the clean on the APP.

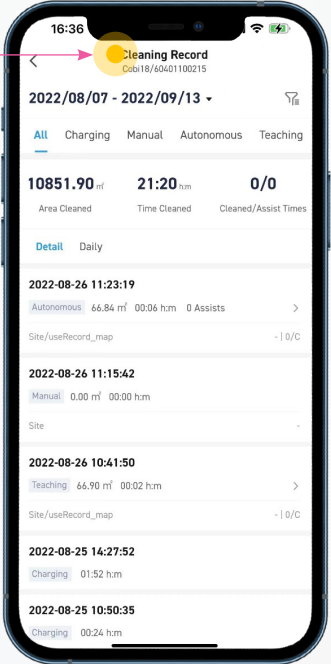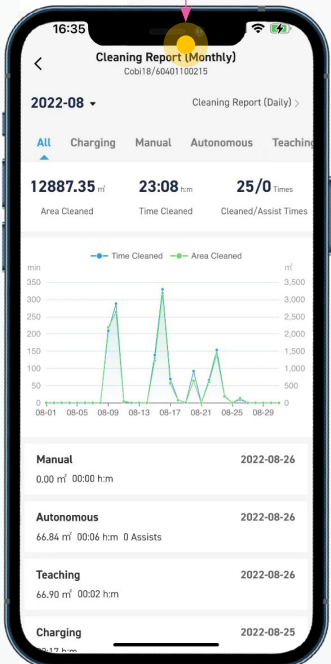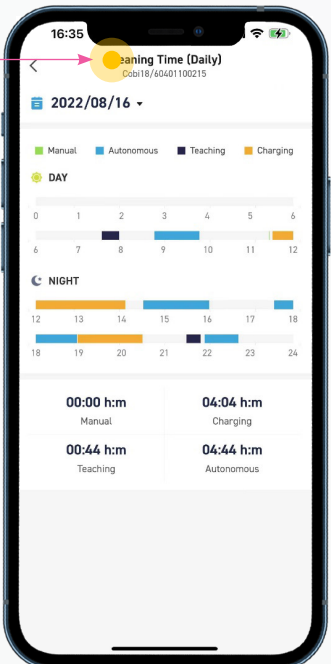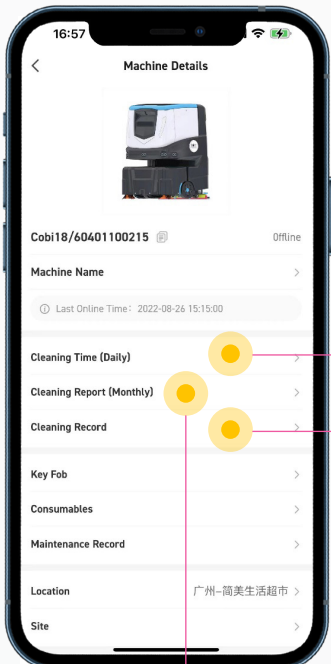



ICE COBOTICS

# Cobi 18

Quick Start Guide



For operating and instructional videos, scan this QR code.

## Before Each Shift



- Unplug and store power cord.



- Turn battery power on.



- Check cliff and lidar sensors are clean.
- Wipe with dry or lightly damp microfiber cloth.



- Fill solution tank with water and appropriate chemical.

## Starting Up the Machine

- 1 Press the main power switch and the touch screen will power up.



- 2 Enter the enter code :520000.




- 3 Check the screen for warnings. If a message appears, follow instructions on how to clear the warning. If it fails to clear, please contact ICE Cobotics customer service by scanning the QR code at the top.




- 4 Select the Autonomous mode by touching the icon [Autonomous/Mapping] on the screen.



- 5 Push the Cobi to the front of the Location code and scan it.

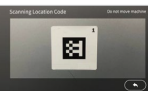

- 6 Select the route(s) you want to run.

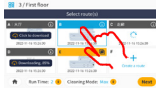

- 7 Touch the [+] icon to add a cleaning route.



- 8 Click mode selection or times selection button if needed. There are three possible cleaning modes when in Autonomous mode. Select the mode you want and push/tap the corresponding icon. Select the number of times you want to run the route and then push/tap the confirm button.



- 9 Press the blue start button to begin your route(s).



## CLEANING MODES

### ECO Mode

The machine will work in energy-saving mode. It is applicable for lighter duty scrubbing or when cleaning in a noise sensitive environment.

### Max Mode

The machine will work at full power, it is applicable for scrubbing heavily soiled floors.

### Mop Only Mode

Only the drive motors will be operational and the mop will pick up pre-existing moisture on the floor.

message appears, follow instructions on

833-423-7626 | info-us@icecobotics.com | us.icecobotics.com

Download the printable Cobi 18 Wall Chart by scanning the QR code.

## Contact Info

ICE Cobotics  
833-423-7626  
clientcare@icecobotics.com  
us.icecobotics.com